



Pantry

Assembly Guide

For wall pantries, 15" to 24" wide and 84" to 96" tall · 14 steps · no glue needed



**Phillips
screwdriver**

or a drill on low speed

Two people

a helper for the side
panels and standing it up



Watch the video

scan or visit

youtu.be/MeB5kENfmiU

Shown: WP2490B in Ice White Shaker. 15" and 18" pantries have two doors; 24" pantries have four. Every size goes together the same way.

Get ready



You'll need

- Phillips screwdriver, or a drill/driver on a low speed
- A helper
- A clean, flat work area longer than the pantry

In the box


- Face frame with doors attached
- Side panels, back panel, bottom panel, fixed shelf, top panel, toe kick
- Adjustable shelves
- Hardware: locking screws, shelf clips, door bumpers. Quantities vary by cabinet size.

Check every panel first. Open all boxes and look over each panel before you start. Contact Cabinet Giant right away if anything is damaged or missing.

Check your ceiling. To tilt a pantry upright, your ceiling must be taller than the cabinet's diagonal: about 93" for a 90" pantry, 99" for a 96" pantry. If your ceiling is lower, assemble the pantry standing up, near where it will go.


One guide for every pantry. 15" and 18" pantries have two doors; 24" pantries have four. They all go together the same way.

Protect the finish. Don't open the box with a sharp blade near the panels. Flatten a box and use it as a work pad.

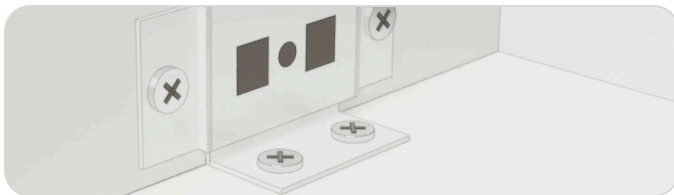


How the clips work

Every panel comes with its metal clips already attached. The connector tab slides under the receiving clip, then one locking screw through the center holds them together.

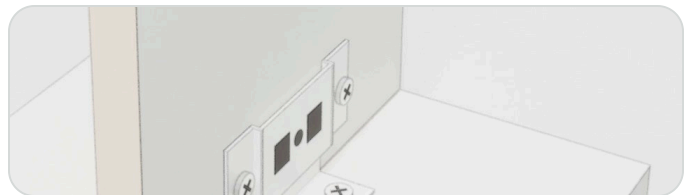


TIP Loosen or tap

Loosen the two screws on each receiving clip a half turn so the panels slide in easier, and tighten them again before the locking screw. Or tap the panel's edge down into the clips with a rubber mallet.

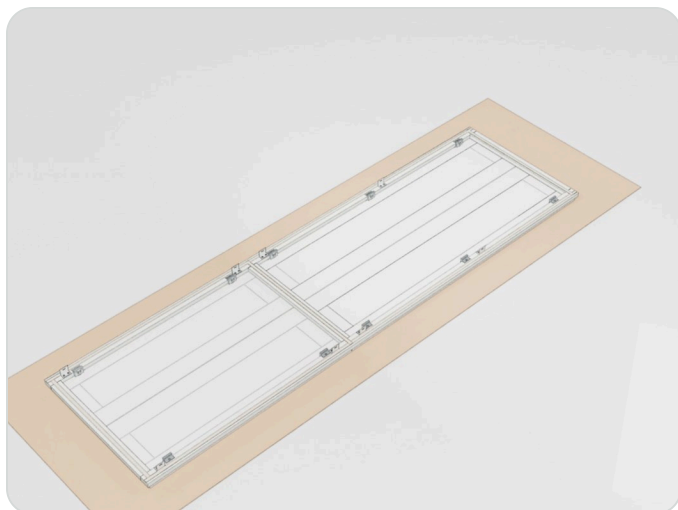

1 Lay the face frame down

Place the face frame face-down on the flattened box. The doors are already attached.

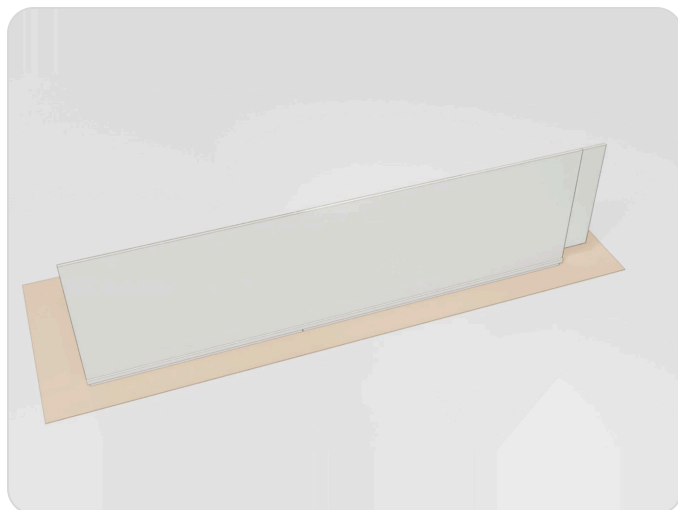

2 Attach the right side

With a helper, hold the panel straight up and lower it into the face-frame groove so the tabs slide under the clips.



3 Attach the left side


Repeat on the left side.



4 Add the bottom panel

Slide it down between the sides, into the grooves.

ASSEMBLY · STEPS 5–8 OF 14

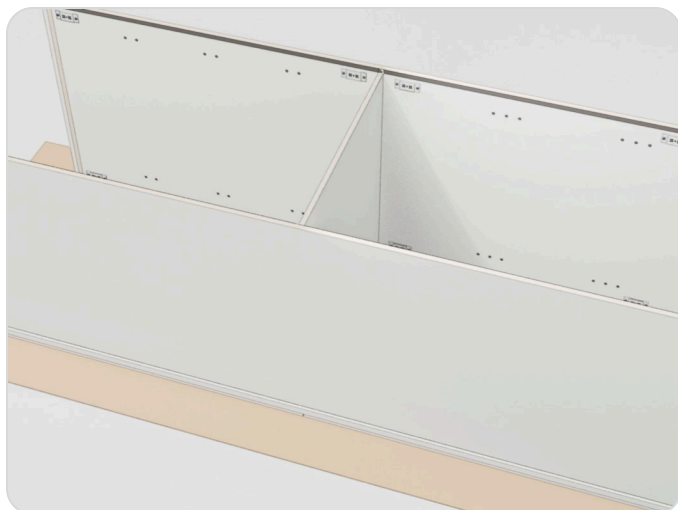

5 Add the fixed shelf

Slide it down into the grooves behind the middle rail of the face frame.




6 Add the top panel

Slide it down into the grooves at the top.



7 Lock the face frame

Snug any clip screws you loosened. Then drive a locking screw into each of the 8 face-frame clips.

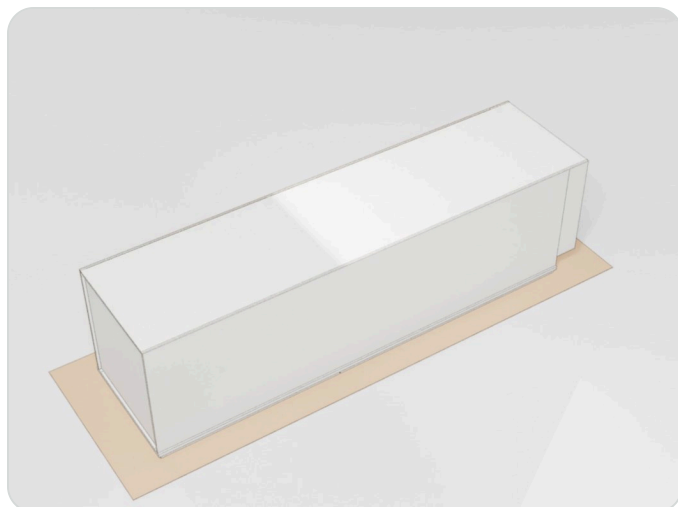


8 Add the back panel

Lower the back straight down onto the sides so its tabs slide under the clips, including the 2 below the bottom panel.



9 Add the toe kick

Slide the toe kick into the notches at the bottom of the sides. Then drive the 4 locking screws below the bottom panel: 2 in the toe kick, 2 in the back.

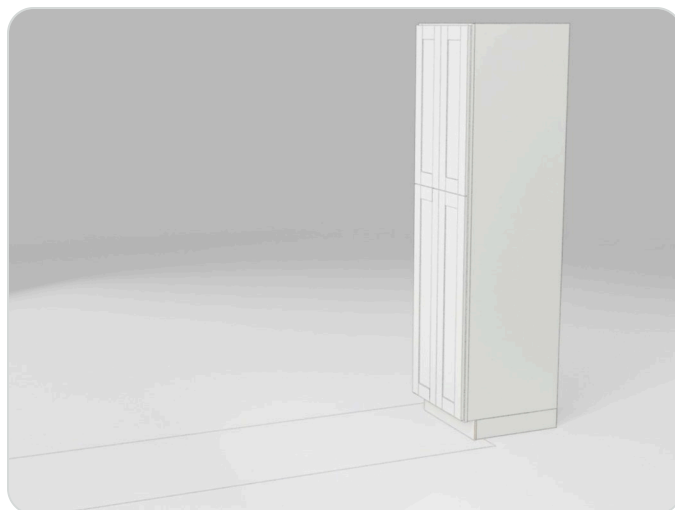

10 Stand the cabinet up

With a helper, carefully tilt the cabinet upright.



11 Lock the back

Open the doors and drive a locking screw into each of the 8 back clips inside the cabinet.



12 Add the shelves

Push 4 shelf clips into the holes at the same height, then rest a shelf on them. Repeat for all 5 shelves.



- 13

Add the bumpers
Stick a bumper at the top and bottom of each door, on the back of the opening edge.



- 14

Adjust the doors
Use the side-to-side and up-down screws to even out the gaps. Don't loosen the center screw, it holds the door on.

Screw	What it does
Marked ↔	Moves the door side to side.
Marked ↕	Moves the door up and down.
Large center screw	Holds the hinge and door on the face frame. Don't loosen it, or the door can drop.
Grey switch	Turns soft-close on or off.

Make small turns and check the gaps after each one. Adjust every hinge on a door the same amount.



Assembly complete

Your pantry is assembled and ready to install.



Watch the video

Scan the code with your phone camera, or visit youtu.be/MeB5kENfmiU

Care: wipe with a soft, damp cloth and dry right away. Don't use abrasive or citrus cleaners.

Questions or missing parts? CabinetGiant.com